 


Instructions

www.easyrefills.com.au

Brother LC-47BK

Kit Code: K49BK

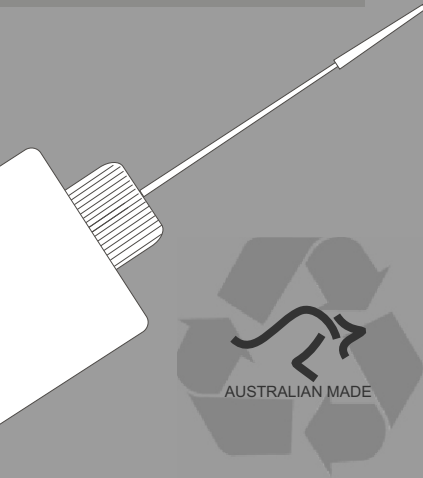

Easyrefills kit

Kit Contents:

- 3 x 40mls ink bottles (black)
- 1 x plastic gloves
- 1 x hand drill
- 1 x absorbent pad
- 3 x plugs
- 4 x stickers

Extra's Needed:

No

 
Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)

NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Preparation

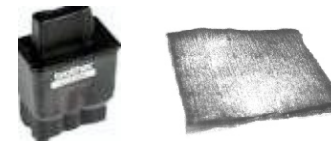

Put the cartridge on a newspaper or some paper towels in an area where you can tolerate a spill.



Drill a hole in the flat surface on top of the cartridge. Drill down into the clear part of the cartridge.

1 Step One



After drilling your hole we can start to refill. You should be able to get around 10 mls of ink into the cartridge.

2 Step Two



Insert the refill needle into the hole you have just made. Push the needle as far down into the cartridge as possible. Note: Do not force the needle.

3 Step Three

4 Step Four

5

Trouble shooting

Printer Compatibility:

MFC-210C, MFC-410CN, MFC-620CN, MFC-3240C, MFC-5440CN, MFC-5840CN, DCP-110C, FAX-1840C.

Cartridge Stats:

Chipped Cartridge: No
Colour: Black
Ink Capacity: 500 Pages

Number of refills per kit:

6 refills per kit

Easyrefills manufacturers all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2004 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au



Slowly inject ink into the cartridge until you see the ink come up to just below the drilled hole. Slowly draw back the refill bottle while refilling.

5 Step Five



Using the pad provided, clean any foreign materials or excess ink from the cartridge. Due to the nature of this cartridge, some leaking may occur. If leaking occurs, simply blot with tissue until the leaking stops.



reseal the filling hole with the plugs provided. The filling hole needs to be 100% sealed.

6 Step Six



Replace the cartridge(s) and run 1-3 cleaning cycles as per printer instructions.

7 Step Seven

8 Step Eight

Q: Cartridge will not print?

A: If the cartridge does not print after refilling, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Prints with streaks through text or image?

A: This could mean that the print nozzles are blocked, therefore preventing ink to flow freely. To correct this problem use the printers cleaning routine. If this does not work, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Ink stains on hands and clothes?

A: To clean your hands, first wash thoroughly in soap and warm water. If the stains persist, try using bathroom cleaner. It may take several washes to remove the ink. There is no real solution to ink stained clothes. However if you are using a dy cleaner, you can tell them the ink is based upon water soluble dye with ethylene glycol added.

Phone Support
1300 730 018