


Instructions

www.easyrefills.com.au

Canon CLI-8

Kit Code: K72CLR

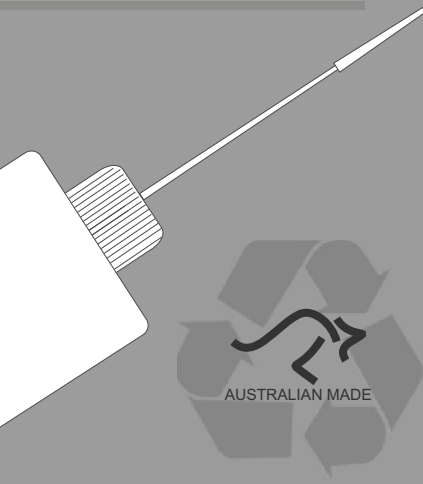

Easyrefills kit

Kit Contents:

- 4 x 40mls ink bottles (C,M,Y and PBK)
- 1 x plastic gloves
- 1 x hand drill
- 1 x absorbent pad
- 8 x plugs
- 4 x stickers


Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)

NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Preparation

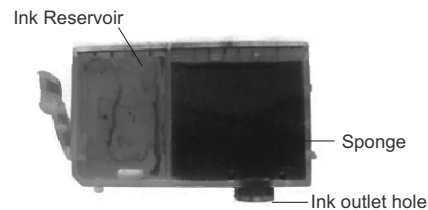


Sit the cartridge in it's original plastic cradle. If you do not have the cradle simply cover the ink outlet hole with a piece of tape. This will prevent ink from leaking while you are refilling the cartridge.




Locate point 'A' on the top of the cartridge. Note: This cartridge has two sections a sponge filled section and an ink reservoir. Point 'A' is located below push, the ink reservoir section on the same side as the clip.

1 Step One

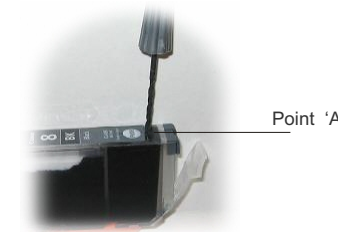

Using the drill tool provided drill a filling hole at point 'A'.

2 Step Two

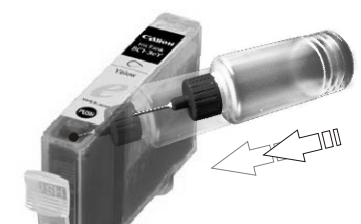

Insert the refill needle into the filling hole. Angle the needle toward the ink outlet hole at the bottom of the cartridge and push down as far as possible.

3 Step Three

4 Step Four

Printer Compatibility:

CANON PIXMA iP4200,PIXMA iP5200, PIXMA iP5200R,PIXMA iP6600D,PIXMA Mp500 PIXMA MP800.

Cartridge Stats:

Colours: Black
Ink Capacity: 6 ml per chamber

Number of refills per kit:

9 refills per kit

Easyrefills manufacturers all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2004 Easyrefills. All names and numbers used are registered trademarks of their respective owners.


www.easyrefills.com.au

General Information



S-l-o-w-l-y and gently squeeze the ink refill bottle to force ink into the reservoir until it is almost full.

5 Step Five

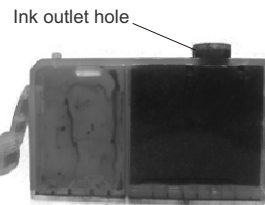

Turn the cartridge upside down and carefully remove the cradle or tape from the ink outlet hole (see step 1). Note: Make sure you have paper towel handy as ink may have pooled during refilling and could drip.



Insert the plug provided into the refilling hole. Gently squeeze the sides of the cartridge while resealing the hole. An air tight seal must be formed. Cover the hole and plug with one of the stickers provided.

6 Step Six



Install the cartridge into your printer and run the head cleaning utility (see printer manual). For best results wait 20 minutes before you resume printing.

7 Step Seven

8 Step Eight

Q: Cartridge will not print?

A: If the cartridge does not print after refilling, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Prints with streaks through text or image?

A: This could mean that the print nozzles are blocked, therefore preventing ink to flow freely. To correct this problem use the printers cleaning routine. If this does not work, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Please Note

This cartridge has a chip. When you reinsert the cartridge back into the printer you will get some pop ups asking questions about using the cartridges again, just answer all questions until your cartridge is accepted. The cartridge will print fine but your ink level gauge will not indicate a full cartridge. Having trouble getting your printer to print because it thinks its empty, look for an orange blinking light hold for 5 seconds until gone.

Phone Support
1300 730 018

9

Trouble shooting