

EPSON REFILLABLE CARTRIDGE INSTRUCTIONS



Step 1. Remove silicon plug from tank



Step 2. S-l-o-w-l-y squeeze the appropriate ink into correct tank through the filling hole.



Step 3. Fill no higher than the line indicated here.



Step 4. Replace silicon plug back into the filling hole.



Step 5. Instal refilled tank into printer as normal. Chip / ink levels will automatically reset to full.

Filling Hole

Air Breather Hole



When the cartridge runs out of ink, reset the chip as shown below then follow steps 1-5 for refilling the tank.

Use a metal tool like tweezers to touch pin A and pin B as shown, to make it short circuit. This will reset the chip / ink levels to full. If cartridge is removed from printer ink levels will be stored on the chip.

