 


Instructions

www.easyrefills.com.au

Canon BCI-3e/PGI-5/PGI-520

Kit Code: K52BK

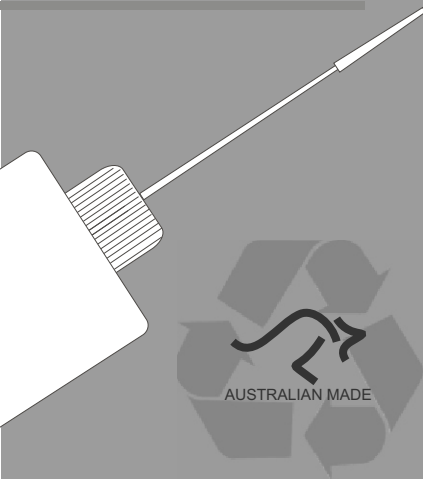

Easyrefills kit

Kit Contents:

- 3 x 40mls ink bottles (black)
- 1 x plastic gloves
- 1 x hand drill
- 1 x absorbent pad
- 2 x plugs


Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)

NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Preparation

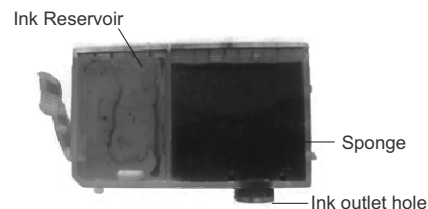


Sit the cartridge in it's original plastic cradle. If you do not have the cradle simply cover the ink outlet hole with a piece of tape. This will prevent ink from leaking while you are refilling the cartridge.



Locate point 'A' on the top of the cartridge. Note: This cartridge has two sections a sponge filled section and an ink reservoir. Point 'A' is located below push, the ink reservoir section on the same side as the clip.

1 Step One

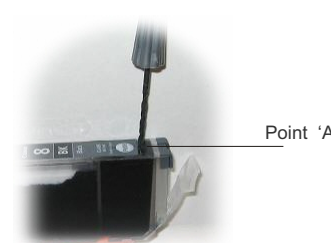

Using the drill tool provided drill a filling hole at point 'A'.


3 Step Three

2 Step Two



Insert the refill needle into the filling hole. Angle the needle toward the ink outlet hole at the bottom of the cartridge and push down as far as possible.

4 Step Four

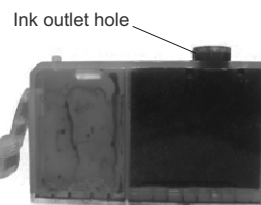

Turn the cartridge upside down and carefully remove the cradle or tape from the ink outlet hole (see step 1). Note: Make sure you have paper towel handy as ink may have pooled during refilling and could drip.

7 Step Seven

Q: Cartridge will not print?

A: If the cartridge does not print after refilling, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Prints with streaks through text or image?

A: This could mean that the print nozzles are blocked, therefore preventing ink to flow freely. To correct this problem use the printers cleaning routine. If this does not work, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Please Note- This does not apply to the BCI-3

This cartridge has a chip. When you reinsert the cartridge back into the printer you will get some pop ups asking questions about using the cartridges again, just answer all questions until your cartridge is accepted. The cartridge will print fine but your ink level gauge will not indicate a full cartridge. Having trouble getting your printer to print because it thinks its empty, look for a orange blinking light hold for 5 seconds OR until gone.

Phone Support
1300 730 018

?

Trouble shooting

Printer Compatibility:

CANON PIXMA iP4200, PIXMA iP5200, PIXMA iP5200R, PIXMA MP800, PIXMA Mp500, PIXMA Mp830, iX4000, iX5000, iP3300, PIXMA MP510, PIXMA MP530, PIXMA iP4300, PIXMA iP5300, PIXMA MP800R, PIXMA MP810, PIXMA Mp960, PIXMA MP750, PIXMA MP760, PIXMA MP780, PIXMA iP3000, PIXMA iP4000, PIXMA iP5000, BJC-3000, i865 + More

Cartridge Stats:

Colours: Black
Ink Capacity: 13 ml per chamber

Number of refills per kit:

9 refills per kit

Easyrefills manufactures all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2004 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au

General Information