


# Instructions

www.easyrefills.com.au

Canon PG-37/PG-40/PG-50

Kit Code: K53BK

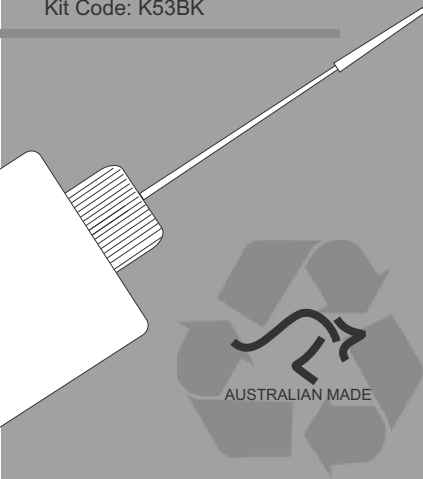

## Easyrefills kit

### Kit Contents:

- 3 x 40mls ink bottles (black)
- 1 x plastic gloves
- 1 x hand drill
- 1 x absorbent pad

### Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)

**NB:** Ink stains so we would recommend you wear old clothes or an apron when refilling.



## Preparation



Sit the cartridge on newspaper or simply cover the ink outlet hole with a piece of tape. This will prevent ink from leaking while you are refilling the cartridge.



Drill a hole into the dimple just below the "B" as shown above.

## 1 Step One 2 Step Two



Insert the refill needle into the filling hole. Angle the needle toward the ink outlet hole at the bottom of the cartridge and push down as far as possible.



S-l-o-w-l-y and gently squeeze the ink refill bottle to force ink into the reservoir until it is almost full. Do not cover drilled hole as this will cause a vacuum and the cartridge will not print.

## 3 Step Three 4 Step Four

### Printer Compatibility:

PIXMA iP1200, PIXMA iP1600, PIXMA iP2200  
PIXMA MP150, PIXMA MP170, PIXMA MP450,  
PIXMA MP160, PIXMA iP1700, PIXMA Mp180,  
PIXMA iP1300 + MORE

### Cartridge Stats:

Colour: Black

#### Ink Capacity and Refills per Kit:

PG-37: 11ml - 10 refills  
PG-40: 16ml - 7 refills  
PG-50: 22ml - 5 refills

Easyrefills manufactures all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2004 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au



Install the cartridge into your printer and run the head cleaning utility (see printer manual). For best results wait 24 hours before you resume printing.



Each time the cartridge is removed from the printer an "empty cartridge" message appears and a blinking amber light will come on, on the printer. Holding the paper feed button down for 3-5 sec, this will allow you to override the counter

## 5 Step Five 6 Step Six

### Q: Printer is working but no image is being printed?

**A:** Ensure the drilled hole is not covered. Covering the drilled hole creates a vacuum which stops the ink from flowing through the cartridge and onto the paper.

### Q: Prints with streaks or banding through text or image?

**A:** This could mean that the print nozzles or print head are blocked, thereby preventing the ink from flowing freely.

If the head cleaning utility on your computer does not fix this problem, rest the print nozzles on a wet tissue for about 10 minutes. This should draw the ink through the nozzles. Reinsert your cartridges and try printing again.

If the problem persists, remove the ink cartridge from the printer and clean the nozzles on the bottom of the cartridge with a cotton swab and hot water. Make sure **NOT** to touch the contact points on the front of the cartridge.

## ? Troubleshooting

The print head is part of these cartridges. Running the head clean utility will help maintain, and thereby prolong the life of, your cartridge.

### Q: I have filled the cartridge but the computer is telling me the ink level is low?

**A:** Refilling these cartridges means you will lose your "ink status monitor". Our website (www.easyrefills.com.au) provides a couple of methods by which it may be possible to reset the ink level of your cartridge (look under FAQ). If these do not work, Easyrefills recommends you set a reminder once a week (more or less frequently, depending on your printer usage) and refill at that time.

Keeping the ink tanks full will prolong the life of your cartridge as damage and blockages occur when there is no ink flowing through the print head.

**Phone Support**  
**1300 730 018**

## ?

## General Information