


Instructions

www.easyrefills.com.au

Brother LC-21

Kit Code: K60 CLR

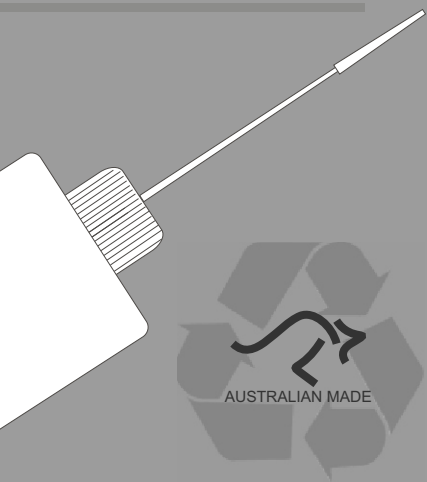

Easyrefills kit

Kit Contents:

- 3 x ink bottles (Red, Blue, Yellow)
- 1 x plastic gloves
- 1 x hand drill
- 1 x absorbent pad
- 4 x stickers

Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)


NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Preparation



Place one of the supplied stickers over the ink outlet hole 'A' located on the bottom of the cartridge. Note: Do not cover breather hole 'B'.

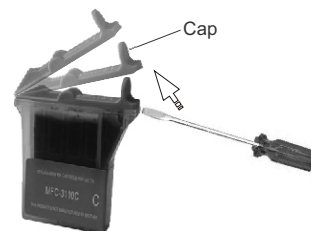

Use a screw driver or knife to remove the cap from the top of the cartridge. Insert the blade into the sealing joint between the cap and the body and carefully pry it off. Note: Be very careful not to break the cap.


1

Step One


2

Step Two

View from top

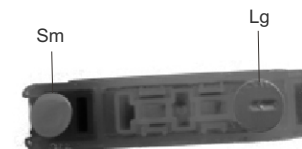

Use a penknife or your fingernail to remove the Large (Lg) and Small (Sm) silver seals on the top of the cartridge..

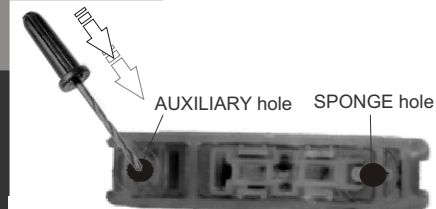

Use the drill tool provided to widen both the SPONGE and AUXILIARY filling holes in the top of the cartridge.

3


Step Three

4

Step Four

5


Step Five

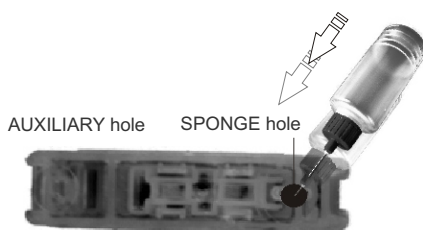

Insert the refill needle through the SPONGE filling hole and push all the way into the cartridge. Note: You may feel a slight pressure because the cartridge contains a sponge.

6


Step Six

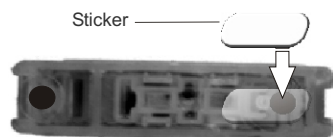

S-l-o-w-l-y inject approximately 7ml of ink and reseal the SPONGE filling hole and breather port with a sticker.

7

Step Seven

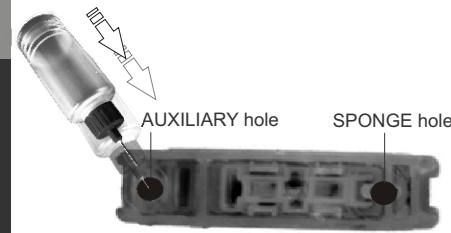

Insert the refill needle into the AUXILIARY filling hole no more than 2cm and inject approximately 3ml of ink. Reseal the hole with a sticker.

8

Step Eight



Replace the cap of the cartridge (see step 2) and remove the sticker covering the ink outlet hole. Install the cartridge into your printer and run the head cleaning utility (see printer manual).

Printer Compatibility:

Brother MFC-3100C, 5100C, 5200C

Cartridge Stats:

Colour: Tri-Colour (Red, Blue, Yellow)
Ink Capacity per chamber: 10ml
Weight when full: 40 grams

Number of refills per kit:

6 refills per kit

Easyrefills manufacturers all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2004 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au

?

Trouble shooting

Q: Cartridge will not print?

A: If the cartridge does not print after refilling, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Prints with streaks through text or image?

A: This could mean that the print nozzles are blocked, therefore preventing ink to flow freely. To correct this problem use the printers cleaning routine. If this does not work, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Ink stains on hands and clothes?

A: To clean your hands, first wash thoroughly in soap and warm water. If the stains persist, try using bathroom cleaner. It may take several washes to remove the ink. There is no real solution to ink stained clothes. However if you are using a dy cleaner, you can tell them the ink is based upon water soluble dye with ethylene glycol added.

Phone Support
1300 730 018