Instructions

www.easyrefills.com.au

Canon CL-38/CL-41/CL-51

Kit Code: K73CLR



Kit Contents:

- 3 x 40mls ink bottles (C,M,Y)
- 1 x plastic gloves
- 1 x hand drill
- 1 x absorbent pad

Preparation:

*a*syrefills

Ш

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)


NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Sit the cartridge on newspaper or simply cover the ink outlet hole with a piece of tape. This will prevent ink from leaking while you are refilling the cartridge.



Peal off the top label. You will notice three small holes (too small to refill)

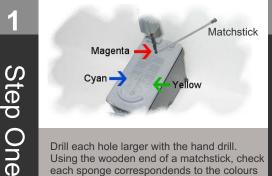

Drill each hole larger with the hand drill. Using the wooden end of a matchstick, check each sponge correspondends to the colours on this sheet BEFORE refilling.



Insert the refill needle into the filling hole. Angle the needle toward the ink outlet hole at the bottom of the cartridge and push down as far as possible.

Four

Trouble

shooting

Step

Step

Three

Information neral

Printer Compatibility:

PIXMA iP1200, PIXMA iP1600, PIXMA iP2200, PIXMA iP1610D.PIXMA 6220D.PIXMA Mp150. PIXMA MP170, PIXMA MP450, PIXMA iP6210D, PIXMA iP1700.PIXMA iP1300.PIXMA Mp160. PIXMA MP180, PIXMA Mp460, PIXMA iP6320D + MORE

Cartridge Stats:

Colours: Cyan, Magenta, Yellow Ink Capacity: 6 ml per chamber

Number of refills per kit:

7 refills per kit

Easyrefills manufactures all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2004 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au



S-I-o-w-I-y and gently squeeze the ink refill bottle to force ink into the reservoir until it is almost full.

the printing.



Step

Five

Prepar

Ste When finished refilling replace the top label or leave it off, this will make no difference in



Install the cartridge into your printer and run the head cleaning utility (see printer manual). For best results wait 24 hours before you resume printing.



Each time the cartridge is removed from the printer a"empty cartridge" message appears and a blinking amber light will come on, on the printer. Holding the paper feed or stop reset button down for 3-5 sec, will allow you to override the counter.

Q: Cartridge will not print?

- A: If the cartridge does not print after refilling, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.
- Q: Prints with streaks through text or image?
- **A:** This could mean that the print nozzles are blocked, therefore preventing ink to flow freely. To correct this problem use the printers cleaning routine. If this does not work, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

thoroughly in soap and warm water. If the stain persist, try using bathroom cleaner. It may take several washes to remove the ink. There is no real solution to ink stained clothe. However if you are using a dry cleaner, you can tell them the ink is based on water soluble dye with ethylene glycol added.

1300 730 018

8 Q: Ink stains on hands and clothes? A: To clean your hands, first wash Step

Eig

ht

2

Step

Two

Step

Seven

Phone Support

