


Instructions

www.easyrefills.com.au

Canon PG-510 / 512

Kit Code: K81BK

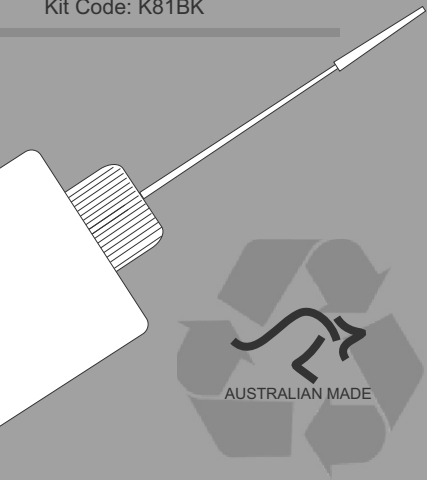

Easyrefills kit

Kit Contents:

- 3 x 40mls ink bottles (black)
- 1 x plastic gloves
- 1 x hand drill
- 1 x absorbent pad

Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)

NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Preparation



Sit the cartridge on newspaper or simply cover the ink outlet hole with a piece of tape. This will prevent ink from leaking while you are refilling the cartridge.



Remove the label from the top of the cartridge.

1 Step One



In the middle of the cartridge is a small vent hole. Use the drill supplied to enlarge the vent hole.

3 Step Three



Insert the needle on the applicator bottle into the drilled hole. S-L-O-W-L-Y and gently squeeze the ink refill bottle to force ink into the cartridge.

4 Step Four

Printer Compatibility:

PIXMA iP2700, MP240, MP250, MP270, MP280, MP 480, MP490, MP495 and MORE

Cartridge Stats:

Colour: Black

Ink Capacity and Refills per Kit:

PG-510: 9ml - 13 refills
PG-512: 15ml - 8 refills

Easyrefills manufactures all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2004 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au



Leave the label off the cartridge and do not cover or plug the vent hole as the cartridge needs to breath.



Install the cartridge into your printer and run the head cleaning utility (see printer manual). For best results wait 24 hours before you resume printing.

5 Step Five

Each time the cartridge is removed from the printer an "empty cartridge" message appears and a blinking amber light will come on, on the printer. Holding the paper feed button down for 3-5 sec, this will allow you to override the counter

Q: Printer is working but no image is being printed?

A: Ensure the drilled hole is not covered. Covering the drilled hole creates a vacuum which stops the ink from flowing through the cartridge and onto the paper.

Q: I have filled the cartridge but the computer is telling me the ink level is low?

A: Refilling these cartridges means you will lose your "ink status monitor". Easyrefills recommends you set a reminder once a week (more or less frequently, depending on your printer usage) and top cartridges up at that time.

Keeping the ink tanks full will prolong the life of your cartridge as damage and blockages occur when there is no ink flowing through the print head.

? Trouble shooting

Q: Prints with streaks or banding through text or image?

A: This could mean that the print nozzles or print head are blocked, thereby preventing the ink from flowing freely.

The print head is part of these cartridges. Running the head clean utility will help maintain, and thereby prolong the life of, your cartridge.

If the head cleaning utility on your computer does not fix this problem, rest the print nozzles on a wet tissue for about 10 minutes. This should draw the ink through the nozzles. Reinsert your cartridges and try printing again.

If the problem persists, remove the ink cartridge from the printer and clean the nozzles on the bottom of the cartridge with a cotton swab and hot water. Make sure **NOT** to touch the contact points on the front of the cartridge.

Phone Support
1300 730 018

?

General Information