


Instructions

www.easyrefills.com.au

Canon CL-641 / 641XL

Kit Code: K99CLR

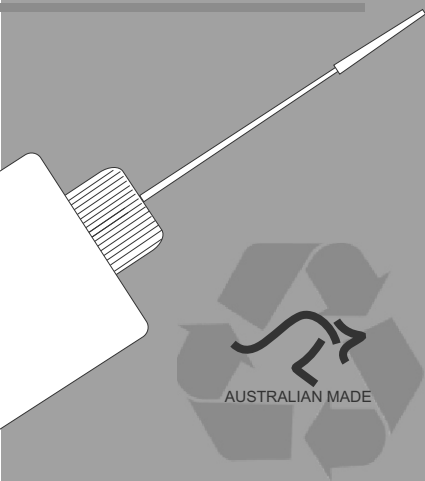

Easyrefills kit

Kit Contents:

- 3 x 40mls ink bottles (C,M,Y)
- 1 x plastic gloves
- 1 x hand drill
- 1 x absorbent pad

Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)

NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Preparation




Sit the cartridge on newspaper or simply cover the ink outlet hole with a piece of tape. This will prevent ink from leaking while you are refilling the cartridge.



Peel off the top label. You will notice three small holes (too small to refill)

1 Step One

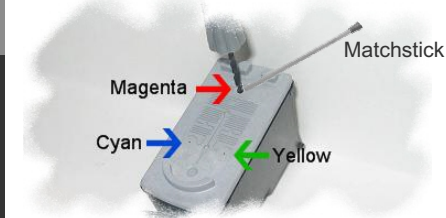

Drill each hole larger with the hand drill. Using the wooden end of a matchstick, check each sponge corresponds to the colours on this sheet BEFORE refilling.

2 Step Two



Insert the refill needle into the filling hole. Angle the needle toward the ink outlet hole at the bottom of the cartridge and push down as far as possible.

3 Step Three

4 Step Four

Printer Compatibility:

PIXMA MG2160, PIXMA MG3160, PIXMA MG4160, PIXMA MX376, PIXMA MX436, PIXMA MX516.

Cartridge Stats:

Colours: Cyan, Magenta, Yellow
Ink Capacity: CL-641 - 3ml per chamber
CL-641XL - 5ml per chamber

Number of refills per kit:

CL-641 - 15 refills per kit
CL-641XL - 8 refill per kit

Easyrefills manufactures all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2012 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au



S-l-o-w-l-y and gently squeeze the ink refill bottle to force ink into the reservoir until it is almost full.



When you have finished refilling the cartridge leave the top label off. Replacing the label or plugging the holes will cause a vacuum and the cartridge will not print.

5 Step Five

6 Step Six



Install the cartridge into your printer and run the head cleaning utility (see printer manual). For best results wait 24 hours before you resume printing.



Each time the cartridge is removed from the printer an "empty cartridge" message appears and a blinking amber light will come on, on the printer. Holding the paper feed or stop/reset button down for 3-5 sec, will allow you to override the counter.

7 Step Seven

8 Step Eight

Q: Cartridge will not print?

A: If the cartridge does not print after refilling, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Prints with streaks through text or image?

A: This could mean that the print nozzles are blocked, therefore preventing ink to flow freely. To correct this problem use the printers cleaning routine. If this does not work, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Ink stains on hands and clothes?

A: To clean your hands, first wash thoroughly in soap and warm water. If the stain persist, try using bathroom cleaner. It may take several washes to remove the ink. There is no real solution to ink stained clothe. However if you are using a dry cleaner, you can tell them the ink is based on water soluble dye with ethylene glycol added.

Phone Support
1300 730 018

9

Trouble shooting

General Information