


Instructions

www.easyrefills.com.au

Canon PGI-520/525

Kit Code: K61BK

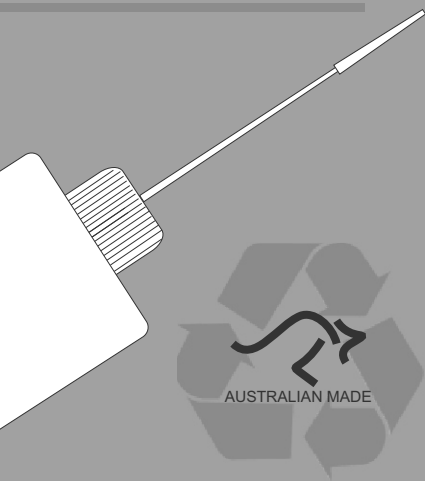

Easyrefills kit

Kit Contents:

- 3 x ink bottles (Black)
- 1 x plastic gloves
- 1 x screw drill tool
- 1 x absorbent pad
- 3 x ball plugs


Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)

NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Preparation

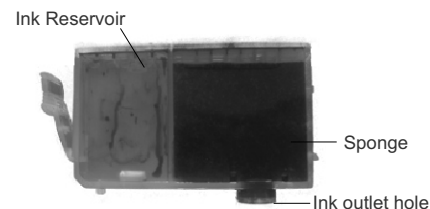

Sit the cartridge in it's original plastic cradle. If you do not have the cradle simply cover the ink outlet hole with a piece of tape. This will prevent ink from leaking while you are refilling the cartridge.



Location of Ball Plug in the PGI 520 Cartridge. the slight depression under the "push" sign on the top of the cartridge - Point "A". Note: This cartridge has two sections a sponge filled section and an ink reservoir. Point 'A' is located above the ink reservoir


1 Step One



Push the supplied screw drill tool into the ball plug which is under the label (as indicated above) and twist a couple of times so that the screw drill tool grabs the ball plug. Gently lever the screw drill tool and the ball plug pops out of it's socket.

3 Step Three

2 Step Two

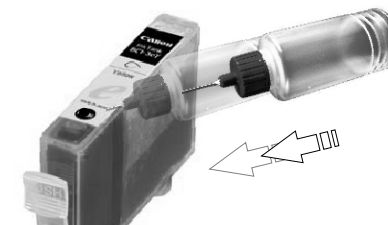

Insert the refill needle into the filling hole. Angle the needle toward the ink outlet hole at the bottom of the cartridge and push down as far as possible.

4 Step Four

Printer Compatibility:

CANON PIXMA MX870, MP640, MP630 and other printers taking PGI-520BK

Cartridge Stats:

Colours: Black
Ink Capacity: 19 ml per chamber


Number of refills per kit:

6 refills per kit

Easyrefills manufactures all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2010 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au

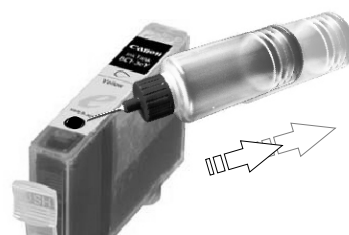


S-l-o-w-l-y and gently squeeze the ink refill bottle to force ink into the reservoir until it is almost full.

5 Step Five



While gently squeezing the sides of the cartridge, insert the ball plug provided, into the refilling hole.

6 Step Six

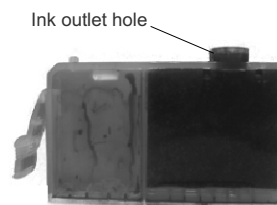

Turn the cartridge upside down and carefully remove the cradle or tape from the ink outlet hole (see step 1). Note: Make sure you have a paper towel handy as ink may have pooled during refilling and could drip.

7 Step Seven



Install the cartridge into your printer and run the head cleaning utility (see printer manual). For best results wait 20 minutes before you resume printing.

8 Step Eight

Cartridge Empty Message?

These cartridges have chips on them which tell the computer they are empty based on an estimation.

- * On some Canon printers you can simply click through the error message and warnings and the printer will continue printing. You will need to repeat this procedure when the other cartridges are out of ink.
- * Other Canon printers have an orange blinking light next to the "RESUME" or "RESET" button. Hold this button for 10-15 seconds to reset the printer so that it will print with the refilled cartridge.

Both of these methods leave you without an Ink Status Monitor. To ensure your cartridges never run dry, thereby possibly causing damage to your print head, we advise you set aside a specific day each week, fortnight or month, depending on your print load, to refill your cartridges whether they need it or not. **NOTE: for best results, refill and replace one cartridge at a time.**

Alternatively, you could purchase a chip resetter from easyrefills.com.au and reprogram the chip back to full again.

Phone Support
1300 730 018

?

Trouble shooting

General Information