
www.easyrefills.com.au

Epson T0492/93/94/95/96

Kit Code: K65CLR

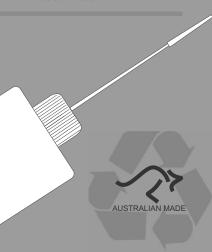

5 x ink bottles (cyan, magenta, yellow, light cyan, light magenta)

1 x plastic gloves

Kit Contents:

- 1 x hand drill
- 1 x absorbent pad
- 3 x plugs

Extra's Needed:

1 x Chip resetter (available from Easy refills)


Preparation:

*a*syrefill

Ш

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)

NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Step


One

Step

Step

Seven

Locate point 'A'+'B' on the top of the cartridge. Note: Look for a round white dot on the original sticker just below the word 'push'. Point 'B' is located on H in push.



A refilling hole and breather hole must now be made at point'A'+'B'. Use the drill tool provided to make this hole. Point 'A' is located just to the left of centre of the white dot Note: Do not drill in the centre of the white dot.

View of inside the cartridge. Note: 2 layers Layer 1 of plastic to drill through Laver 2

Once you have drilled through the first layer of plastic, you will meet another layer of resistence. This must also be drilled through until no resistance is felt.



Insert the refill needle into the hole you have just made. Push the needle as far down into the cartridge as possible. Note: Do not force the needle.

Four

Step

Step

Three

<u>Information</u> eneral

Printer Compatibility:

Epson Stylus Photo RX510, R210, R310

Cartridge Stats:

Chipped Cartridge: Yes Colour Cyan, Magenta, Yellow, Light cyan, Light magenta Ink Capacity: 15 ml Weight when full: 36 grams

Number of refills per kit:

6 refills per kit

Easyrefills manufacturers all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2004 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au



S-I-o-w-I-y and gently squeeze the ink refill bottle to force ink into the cartridge. This must be done with very little pressure, pulling the needle upward as you go. When ink is visible at the top of the hole stop squeezing.



Insert the plug provided into the refilling hole and point 'B'. Gently squeeze the sides of the cartridge while resealing the hole. An a tight seal must be formed. Cover the hole and plug with the sticker provided.

Step Fiv

6

Step

Prepa

Using the pad provided, clean any foreign materials or excess ink from the cartridge. Due to the nature of this cartridge, some leaking may occur. If leaking occurs, simply blot with tissue until the leaking stops.

TO461



Before installing the cartridge into your printer, the chip must be reset using a chip re-setter. If you do not have a chip re-setter. one can be purchased from Easyrefills.

Q: Cartridge will not print?

A: If the cartridge does not print after refilling, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Prints with streaks through text or image?

A: This could mean that the print nozzles are blocked, therefore preventing ink to flow freely. To correct this problem use the printers cleaning routine. If this does not work, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Ink stains on hands and clothes?

A: To clean your hands, first wash thoroughly in soap and warm water. If the stains persist, try using bathroom cleaner. It may take several washes to remove the ink. There is no real solution to ink stained clothes. However if you are using a dy cleaner, you can tell them the ink is based upon water soluble dye with ethylene glycol added.

> **Phone Support** 1300 730 018

8 Chip re-setter Step Eight

Trouble shooting