
Instructions

www.easyrefills.com.au

Canon BCI-6

Kit Code: K69CLR

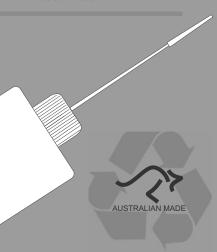

Kit Contents:

6 x 40ml ink bottles (C,M,Y,PC,PM & R)

- 1 x plastic gloves
- 1 x hand drill
- 1 x absorbent pad
- 2 x plugs

asyrefills.


Ш

4 x stickers

Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)

NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Sit the cartridge in it's original plastic cradle. If you do not have the cradle simply cover the ink outlet hole with a piece of tape. This will prevent ink from leaking while you are refilling the cartridge.



Locate point 'A' on the top of the cartridge. Note: This cartridge has two sections a sponge filled section and an ink reservoir. Point 'A' is located above the ink reservoir section on the same side as the clip.

Ink outlet hole

Point 'A'

Using the drill tool provided drill a filling hole at point 'A'.



Insert the refill needle into the filling hole. Angle the needle toward the ink outlet hole at the bottom of the cartridge and push down as far as possible.

Four

Step

Step

Three

Trouble

shooting

Printer Compatibility:

i990.i9900.i9950

Cartridge Stats:

Information

eneral

Colours: Cyan, Magenta, Yellow, Photo Cyan, Photo Magenta & Red Ink Capacity: 15 ml per chamber Weight when full: 30 grams

Number of refills per kit:

9 refills per kit

Easyrefills manufacturers all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2004 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au



S-I-o-w-I-y and gently squeeze the ink refill bottle to force ink into the reservoir until it is almost full.



Insert the plug provided into the refilling hole. Gently squeeze the sides of the cartridge while resealing the hole. An air tight seal must be formed. Cover the hole and plug with one of the stickers provided



6

Step

Prepa

Turn the cartridge upside down and carefully remove the cradle or tape from the ink outlet hole (see step 1). Note: Make sure you have paper towel handy as ink may have pooled during refilling and could drip.



Install the cartridge into your printer and run the head cleaning utility (see printer manual). For best results wait 20 minutes before you resume printing.

Q: Cartridge will not print?

A: If the cartridge does not print after refilling, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Prints with streaks through text or image?

A: This could mean that the print nozzles are blocked, therefore preventing ink to flow freely. To correct this problem use the printers cleaning routine. If this does not work, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

A: To clean your hands, first wash thoroughly in soap and warm water. If the stains persist, try using bathroom cleaner. It may take several washes to remove the ink. There is no real solution to ink stained clothes. However if you are using a dy cleaner, you can tell them the ink is based upon water soluble dye with ethylene glycol added.



Step Eight

Step

One

2

Step

Two

Step

Seven

Q: Ink stains on hands and clothes?

Phone Support 1300 730 018