


Instructions

www.easyrefills.com.au

Replacement PGI-650XL

Kit Code: K85BK

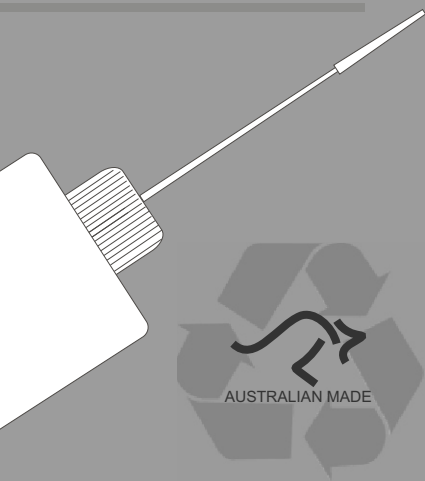

Easyrefills kit

Kit Contents:

- 3 x ink bottles (Black)
- 1 x plastic gloves
- 1 x thumb drill
- 1 x absorbent pad
- 8 x "T" plugs


Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)


NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Preparation

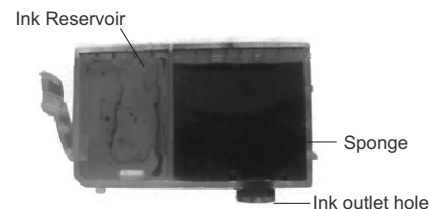


Sit the cartridge in it's original plastic cradle. If you do not have the cradle simply cover the ink outlet hole with a piece of tape or your glove covered finger to prevent ink from leaking while you are refilling the cartridge.

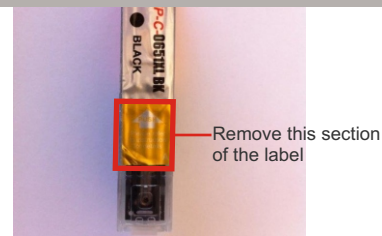

A vent line "zig zags" up the back of these cartridges. Remove the label in this area to expose the vent line.


IMPORTANT: Do **NOT** pierce this line.

1 Step One

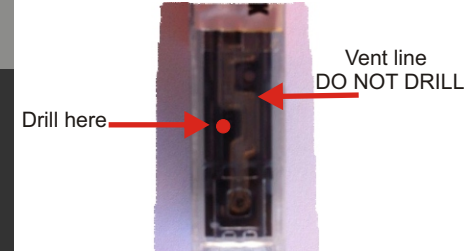

Making sure the ink outlet hole is securely covered, use the thumb drill to drill a hole as indicated above.

2 Step Two

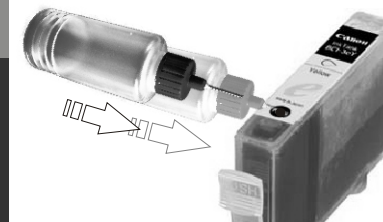

Insert the refill needle into the filling hole. Angle the needle toward the ink outlet hole at the bottom of the cartridge and push down as far as possible.

3 Step Three

4 Step Four

Printer Compatibility:

CANON PIXMA MX726, MX926, iP 7260, MG5460, MG6360 and other printers taking PGI-650XLBK

Cartridge Stats:

Colours: Black
Ink Capacity: 21ml per chamber


Number of refills per kit:

6 refills per kit

Easyrefills manufactures all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2013 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au

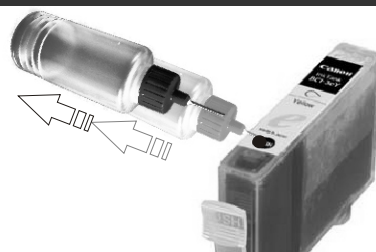


S-L-O-W-L-Y and gently squeeze the ink refill bottle to force ink into the reservoir until it is full.

5 Step Five



Insert black "T" plug into drilled hole.

6 Step Six

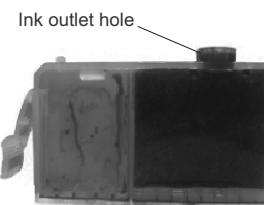

Turn the cartridge upside down and carefully remove the cradle or tape from the ink outlet hole (see step 1). Note: Make sure you have a paper towel handy as ink may have pooled during refilling and could drip.



Install the cartridge into your printer and run the head cleaning utility (see printer manual). For best results wait 20 minutes before you resume printing.

7 Step Seven

8 Step Eight

Cartridge Empty Message?

These cartridges have chips on them which tell the computer they are empty based on an estimation.

- * On some Canon printers you can simply click through the error message and warnings and the printer will continue printing. You will need to repeat this procedure when the other cartridges are out of ink.
- * Other Canon printers have an orange blinking light next to the "RESUME" or "RESET" button. Hold this button for 10-15 seconds to reset the printer so that it will print with the refilled cartridge.

Both of these methods leave you without an Ink Status Monitor. To ensure your cartridges never run dry, thereby possibly causing damage to your print head, we advise you set aside a specific day each week, fortnight or month, depending on your print load, to refill your cartridges whether they need it or not. **NOTE: for best results, refill and replace one cartridge at a time.**

Phone Support
1300 730 018

?

Trouble shooting

General Information